



VENT-A-HOOD COMPANY, Ltd.

1000 NORTH GREENVILLE P.O. BOX 830426 RICHARDSON, TEXAS 75083-0426 972-235-5201


Vent-A-Hood offers many different types of venting accessories. The following page lists the dimensions for each of these accessories, along with their respective part numbers.

Vent-A-Hood also provides general ducting guidelines for its products. If there is a discrepancy between these guidelines and local codes, local codes should take precedent.

1. Always use the correct size ducting, and never reduce the size of the duct. Maintain the same square inch area or larger throughout the entire duct run.
2. Run the duct in as short and as straight a manner as possible, with as few turns as possible. If turns must be made, use smooth, gradual turns. Sharp, hard angled turns restrict airflow and reduce the efficiency of the unit.
3. Only use smooth walled duct pipe. Do not use corrugated or "flex" duct.
4. For duct runs longer than ten feet, increase the duct size by one inch after the first ten feet, and one inch for every ten feet thereafter.


VENTING ACCESSORIES FOR VENT-A-HOOD PRODUCTS

ROUND VENT DUCT

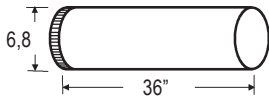


| MODEL | DIM |
|-------|-----|
| VP500 | 6" |
| VP502 | 8" |

3 1/4" RECTANGLE DUCT

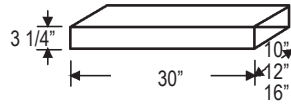


| MODEL | DIM |
|-------|--------------|
| VP504 | 3 1/4" X 10" |
| VP505 | 3 1/4" X 12" |
| VP506 | 3 1/4" X 16" |

6" RECTANGLE DUCT

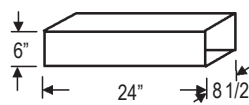


| MODEL | DIM |
|-------|-------------|
| VP507 | 6" X 8 1/2" |

ROOF JACK

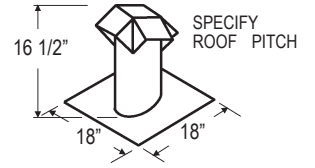


| MODEL | DIM |
|-------|-----|
| VP508 | 6" |
| VP510 | 8" |

ADJUSTABLE ELBOW

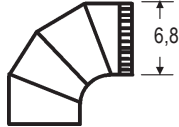


| MODEL | DIM |
|-------|-----|
| VP513 | 6" |
| VP515 | 8" |

BACK VENT ELBOW

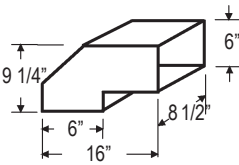


| MODEL | DIM |
|-------|-----|
| VP547 | |

SIDE VENT ELBOW

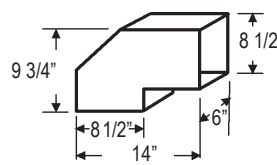


| MODEL | DIM |
|-------|-----|
| VP548 | |

LOW PROFILE ROOF JACK




| MODEL | DIM |
|-------|-----|
| VP539 | 6" |
| VP541 | 8" |

LOW PROFILE ROOF JACK




| MODEL | DIM |
|-------|-----|
| VP552 | 10" |
| VP553 | 12" |

OFFSET L & R TRANSITION FOR ISLAND BLOWERS

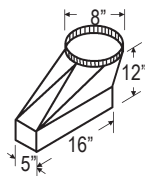


| MODEL | DIM |
|-------|------------------|
| VP542 | TOP LEFT ISLAND |
| VP543 | TOP RIGHT ISLAND |

DUAL TRANSITION FOR T400 CLUSTER BLOWERS

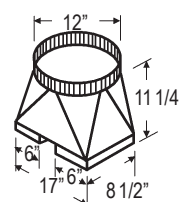


| MODEL | DIM |
|-------|-----|
| VP549 | |

SIDE VENT TRANSITION L & R FOR ISLAND HOODS

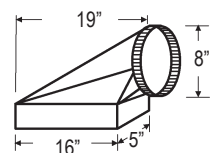


| MODEL | DIM |
|-------|------------|
| VP544 | LEFT SIDE |
| VP545 | RIGHT SIDE |

STANDARD ISLAND TRANSITION

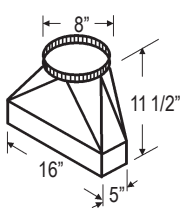


| MODEL | DIM |
|-------|-----|
| VP546 | |

"Y" TRANSITION




| MODEL | DIM |
|-------|---------------|
| VP517 | 8" X 8" - 12" |
| VP518 | 6" X 8" - 12" |
| VP551 | 6" X 8" - 10" |

WALL MOUNT TRANSITION FOR B200

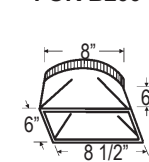


| MODEL | DIM |
|-------|------------------|
| VP519 | 6" X 8 1/2" - 8" |

3 1/4 x 10 TO 6 TRANSITION

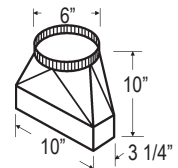


| MODEL | DIM |
|-------|--------------------|
| VP520 | 3 1/4" X 10" TO 6" |

TO WALL TRANSITION

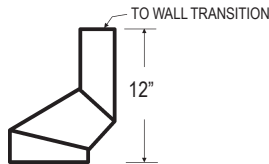


| MODEL | DIM |
|-------|-----------------------------|
| VP523 | 6" X 8 1/2" TO 3 1/4" X 16" |

IN WALL TRANSITION

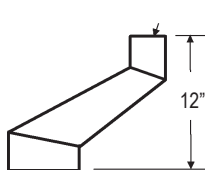


| MODEL | DIM |
|-------|-----------------------------|
| VP525 | 6" X 8 1/2" TO 3 1/4" X 16" |

WALL LOUVER




| MODEL | DIM |
|-------|-------------|
| VP526 | 6" |
| VP528 | 8" |
| VP538 | 6" X 8 1/2" |

WALL LOUVER




| MODEL | DIM |
|-------|-----|
| VP554 | 10" |
| VP555 | 12" |

OFFSET KIT-ROUND

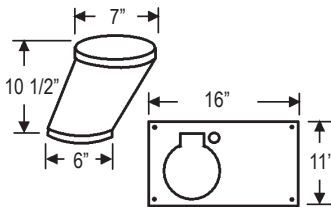


| MODEL | DIM |
|-------|----------|
| VP529 | 6" TO 7" |

OFFSET KIT-RECTANGLE

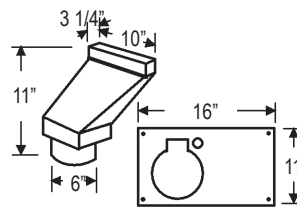


| MODEL | DIM |
|-------|--------------------|
| VP550 | 6" TO 3 1/4" X 10" |

COLLARS

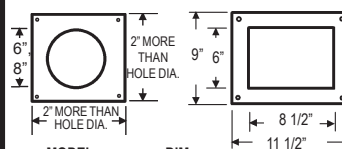

| MODEL | DIM |
|-------|-------------|
| VP533 | 6" |
| VP535 | 8" |
| VP537 | 6" X 8 1/2" |

EP TRANSITION

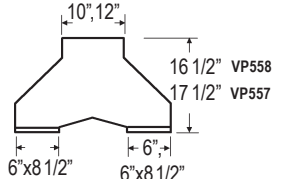

| MODEL | DIM |
|-------|-----|
| VP557 | 10" |
| VP558 | 12" |